## **FIRESTOP CENTRE**

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz

Step-by-step installation instructions:

- 1. Cut the AGNI-Wrap 50 to fit one revolution into the aperture.
- 2. Wrap AGNI-Wrap 50 around the service and insert into the aperture on each side of the wall, leaving 10mm extending past the lining.
- 3. Apply 10mm (nominal) AGNI-Black sealant into any gap between the AGNI-Wrap 50 and the conduit and any gap between the AGNI-Wrap 50 and the wall.

rechnical information	
Substrate	<ul> <li>Min. 64mm timber or steel stud wall with a minimum of two layers of 13mm (or greater) FR plasterboard on each side, with or without insulation.</li> <li>Min. 116mm concrete wall</li> </ul>
Service range	DN25mm flexible PVC-U conduit with up to 6 x Optic cables
Annular gap	6.7 - 19.1mm
AGNI-Products	AGNI-Black, ANI-Wrap 50
Protection installation	From both sides of the wall

Compliance Information	
AS1530.4-2014, AS4072.1-2005	
-/120/120	
RIRF25005	

or 116mm Concrete/Masonry/Block Wall

Flexible Conduit with up to 6 x 4.8mm Fibre Optic Cables

FRR -/120/120



FIRE RATED TECHNOLOGY

8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date 03.04.2025


AGNI-Wrap in 2 x 13mm Plasterboard Wall

Page 1 of 2

System ID# FC451

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot overse installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

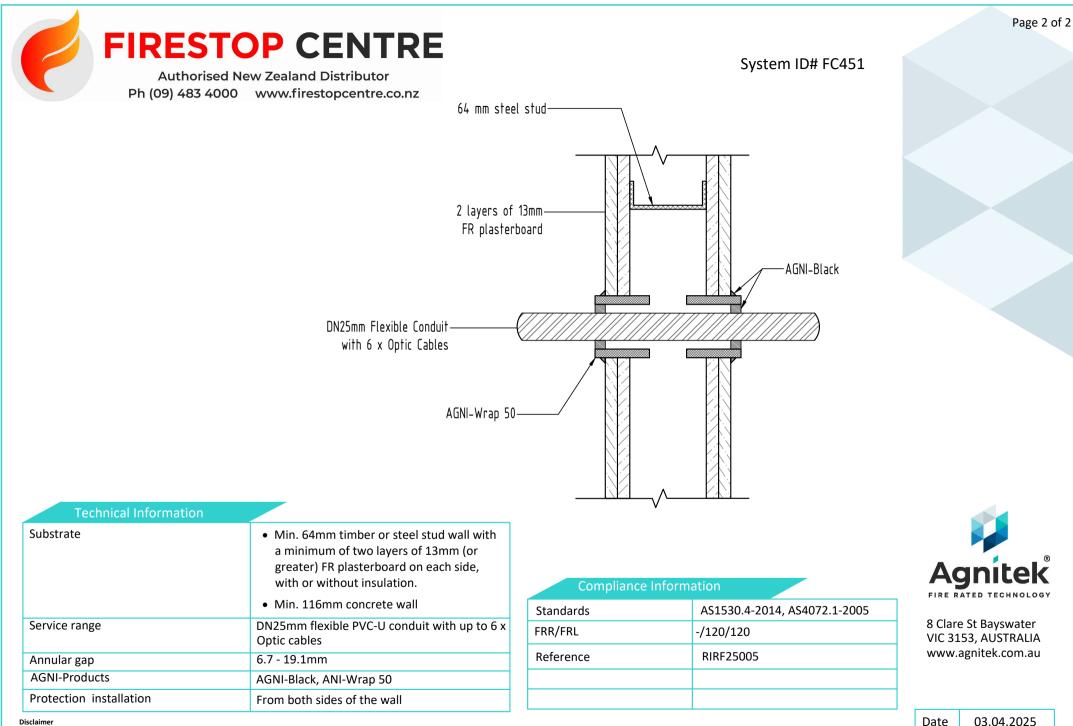

## Disclaime

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

03.04.2025