


FIRESTOP CENTRE

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz AGNI-Seal in a Shaftwall (min 41mm) Copper Pipe (Bare - 100mm) FRR -/60/-

System ID# FC460

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- 2. Apply sealant to the full depth of the annular space, 41mm (nominal) deep and finished flush with the wall.

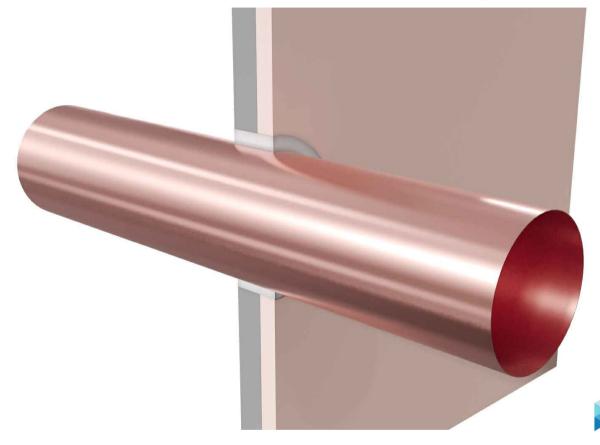

Technical Information	
Substrate	Min. 25mm Shaftliner & min. 1 x layer of 16mm FR plasterboard
Service range	DN100mm Copper pipe
Annular gap	8.3-9.8mm
AGNI-Products	AGNI-Seal
Protection installation	From both sides of the wall

Compliance Information		
Standards	AS1530.4-2014, AS4072.1-2005	
FRR/FRL	-/60/-	
Reference	RIRF25006	

8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

FIRE RATED TECHNOLOGY


21.04.2025 Date



FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

System ID# FC460

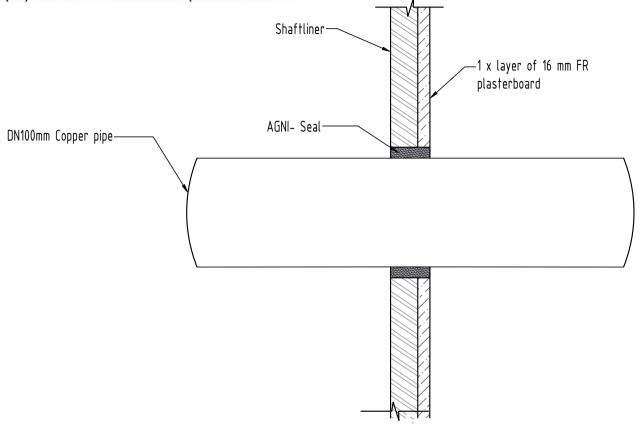

Technical Information	
Substrate	Min. 25mm Shaftliner & min. 1 x layer of 16mm FR plasterboard
Service range	DN100mm Copper pipe
Annular gap	8.3-9.8mm
AGNI-Products	AGNI-Seal
Protection installation	From both sides of the wall

C 0 100 10	liopoo	10401	rmation
	mance		
001116	marree		macion

Standards	AS1530.4-2014, AS4072.1-2005	
FRR/FRL	-/60/-	
Reference	RIRF25006	



8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date 21.04.2025

Disclaimer