FIRESTOP CENTRE


Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz

Step-by-step installation instructions:

- 1. Ensure the aperture is clean.
- 2. Fill the aperture with 26mm (nominal) deep AGNI-Seal (to the full depth of the lining).
- 3. Install a 30mm x 30mm cone of AGNI-Seal around the cable bundle each side of the wall.

AGNI-Seal in 2 x 13mm Plasterboard Wall or 116mm Concrete/Masonry/Block Wall Power Cables (up to 8 x TPS) Max FRR -/120/120

System ID# FC535

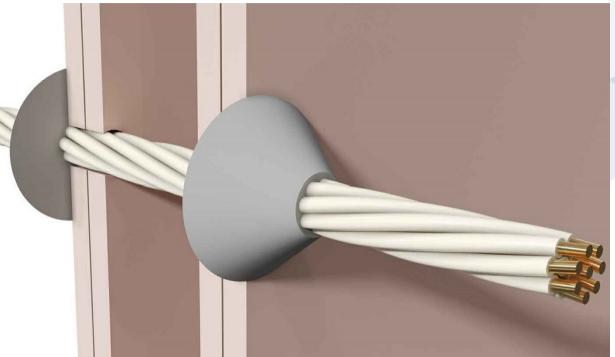

Technical Information		
Substrate	 Min. 64mm steel or timber stud wall with a minimum of two layers of 13mm (or greater) FR plasterboard on each side, with or without insulation. Min. 116mm concrete wall 	
		Stand
		FRR/I
Service type	Cable bundle of up to 8x TPS cabless	Refer
Annular gap	Min: 0mm, Max: 11.5mm	
AGNI-Products	AGNI-Seal	
Protection installation	Both sides of the wall	

Compliance Information	
Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/120/120
Reference	RIRF24016




8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

Page 1 of 2

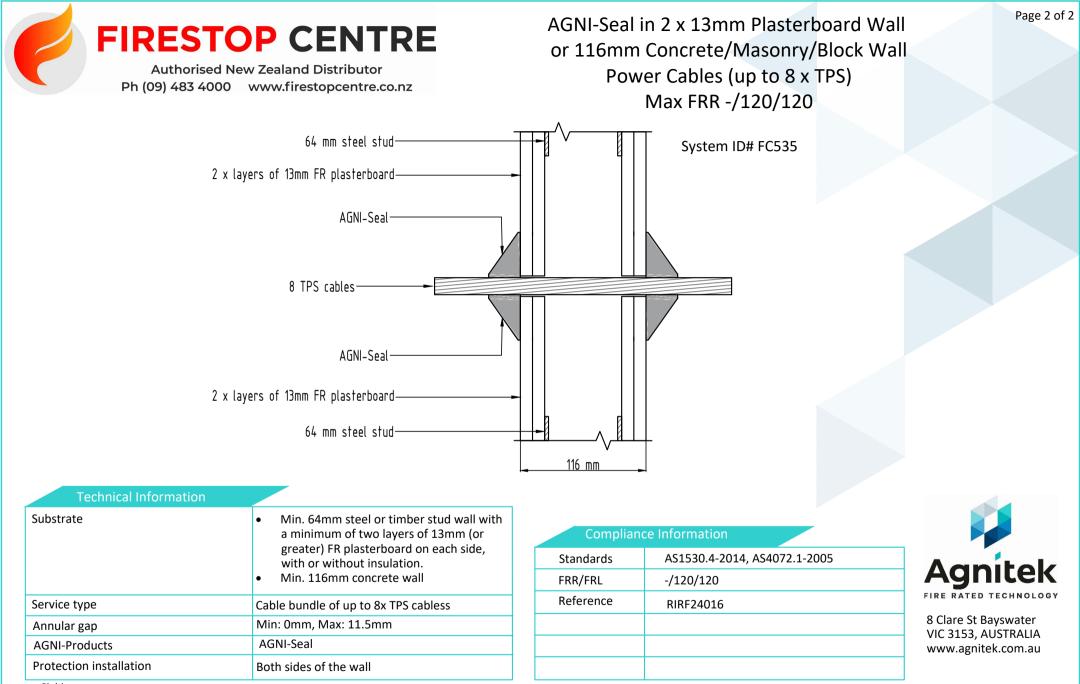

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

Date 08.04.2024