FIRESTOP CENTRE

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- 2. Fill the aperture with AGNI-Seal to a depth of 13mm, i.e. full depth of plasterboard lining.
- 3. Install 2 x layers of 50mm wide AGNI-Shield around the pipe, allowing a 10mm overlap.
- 4. Fix AGNI-Shield with an AGNI-Strap at mid-width.
- 5. Apply a bead of AGNI-Seal at the AGNI-Shield to the wall junction.

Technical Information	
Substrațe	 Min 90mm steel or timber stud wall with a minimum of one layer of 13mm (or greater) FR plasterboard on each side, with or without insulation. Min. 116mm concrete wall
Service type	42mm OD Steel Pipe
Size	Inner diameter (ID): 35mm
	Outer diameter (OD): 42mm
	Thickness (T): 3mm
Annular gap	Min: 0mm
	Max: 9mm
AGNI-Products	AGNI-Shield, AGNI-Seal
Protection installation	Both sides of the wall

Compliance Informa	ation	
Standards	AS1530.4-2014, AS4072.1-2005	
FRR/FRL	-/60/60	FIF
Reference	RIRF24039	8 VI
		w

Agnitek

8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

10.05.2024

Date

Disclaimer


Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

AGNI-Shield in 1 x 13mm Plasterboard Wall

or 116 mm Concrete/Masonry/Block Wall Steel Pipe

Max FRR -/60/60

System ID# FC866

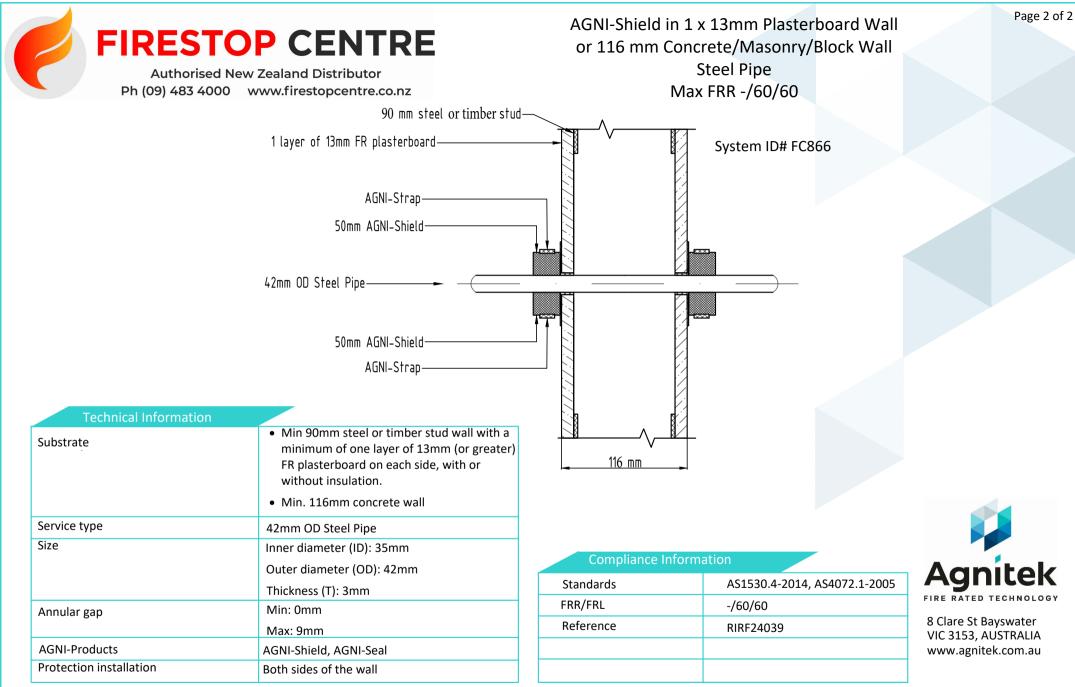

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

Date 10.05.2024