




**Firestop
Centre**
Innovative Firestop Solutions

System FC635

Penetration Detail: PVC Floor Waste
(80 & 100mm FWG) fire-stopped with
Allproof Drop In Fire Collar

Separating Element: Min. 70mm thick
Concrete Floor Slab

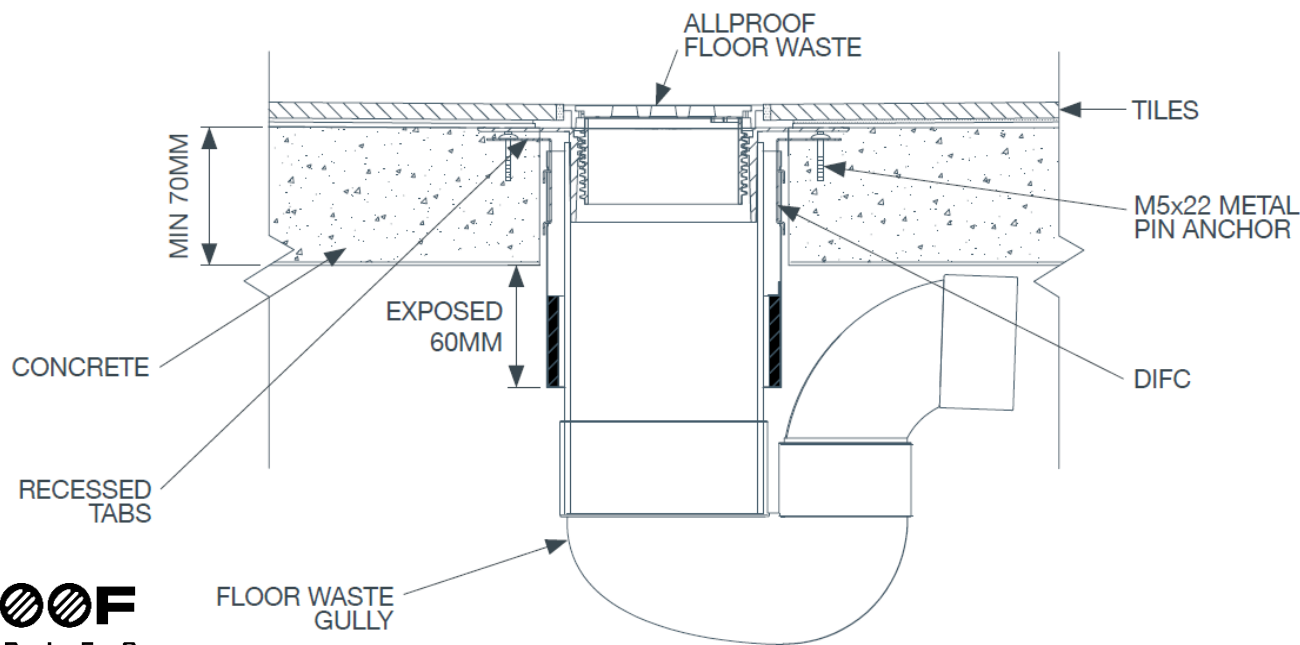

ALLPROOF
INDUSTRIES

Installation Instructions:

1. Ensure substrate around the service is flat and free from obstructions.
2. Core drill hole to the specified diameter.
3. Install Drop In fire collar fixed metal pin anchors. Fixing tabs recessed into floor slab.
4. Ensure collar on underside of slab is exposed no greater than 60mm nor recessed more than 5mm.
5. Install FWG pipework through collar (no sealant required).

Services & Ratings (FRR)

Service Penetration	Pipe Size	Collar Size	Penetration Hole Size	FRR
PVC floor waste	80mm	DIFC80	112mm	-/120/120
PVC floor waste	100mm	DIFC100	142mm	-/120/90

Compliance

Compliance BRANZ Appraisal No.
1088(2025)

Standards AS1530.4-2014 &
AS4072.1-2005

Firestop Centre Technical Support:
Tel: +64 9 483 4000
info@firestopcentre.co.nz
www.firestopcentre.co.nz

Drawing Rev: 1.1

Scale: NTS

Disclaimer: Firestop Centre may change product specifications without notice as part of our ongoing development and testing. All information in this document is provided in good faith and for guidance only. All drawings are for illustration purposes only and may not reflect the actual product. Since we cannot control how the product is installed or the conditions on-site, we do not guarantee the product's performance. We also accept no responsibility for any loss, damage, or injury resulting from the use of this information.