



FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

INSTALLATION INSTRUCTIONS

Aperture must be framed and lined to match the wall.
Annular gap 10 - 30mm.

Sealants permitted for this system are Protecta FR Acrylic or FIRESTOP Ultra. Either may be used.

Place unfoiled Firestop Duct Wrap material compressed nominally 30% into the annular gap leaving a 20mm recess each side. Ensure any gaps in corners, etc are filled to the required compression.

Fill the recess with 20mm deep sealant to each side of the wall. Then apply a bead of sealant to the duct and the wall prior to attaching the angle.

Attach 1.2mm thick steel angle 75mm x 75mm to all sides. Fix to the duct with steel rivets 10mm x 5mm diam at max 100mm centres.

Fix to the wall with plasterboard screws (min 32mm) at max 200mm centres high enough to clear the annular space. Ensure a fixing at max 50mm from each end of an angle section. Apply sealant to any joints or corner gaps.


On the fire side, apply a bead of sealant to each face of the angle. Construct a collar minimum 130mm high from Protecta FR Board (60mm 2-sided) and fix directly to the wall with 8-10g x 75mm screws with penny washers at 200mm centres (passing above the steel angle). Ensure a fixing at max 50mm from the end of each frame section.

Fill any joints in the collar with sealant. Then apply a 20mm sealant fillet at the wall/collar joint and the duct/collar/angle joint. Finally cover the exposed cut edges of the collar with sealant or Protecta FR Coating.

Install the Firestop Duct Wrap layers on the fire side and apply a sealant fillet at the wrap/collar junction.

FIRESTOP Duct Wrap-38

Rectangular duct (up to 1800 x 1000mm)
Plasterborad Wall (1x13mm or 2x13mm)
One-way System - External Fire Only

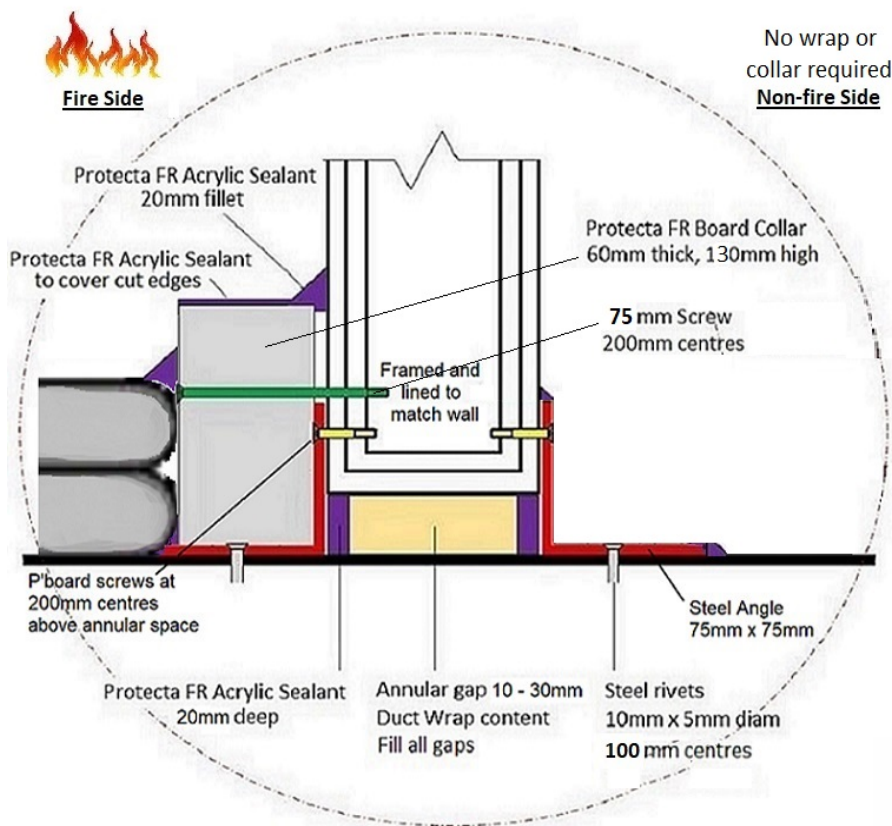

FireTS Lab

Report AR23108, Pages 8, 9-11, 29
AS1530.4-2014 AS4072.1-2005

System ID# FC283

Products	FIRESTOP Duct Wrap-38 Protecta FR Board Protecta FR Acrylic or FIRESTOP Ultra
Application	Fire stopping of rectangular duct through a F/R plasterboard wall
Construction	1x13mm - 64mm steel or 90mm timber stud 2x13mm - 90mm steel or timber stud

Fire Classification

NOTE: For general instructions on installing FIRESTOP Duct Wrap-38 see [Installation Instructions](#) sheet on Firestop Centre website.

External Fire

Single layer wrap	FRR 60/60/30
Double layer wrap	FRR 120/120/120

Where the wall fire rating is less than the above the FRR of the penetration should be reduced to match the FRR of the wall.



FIRESTOP

Firestop Centre Ltd
657 Great South Road
Penrose, AUCKLAND

Sheet size: A4	Drawn date & no: 20/5/24
--------------------------	-----------------------------

As a part of our policy of on-going product development and testing, we reserve the right to modify, alter or change product specifications without giving notice. All information contained in this document is given in good faith and is provided for guidance only. Any drawings provided are for illustrative purposes only. As Firestop Centre has no control over the methods or competence of installation and of prevailing site conditions, no warranties, expressed or implied are intended to be given as to the actual performance of the product mentioned or referred to herein and no liability whatsoever will be accepted for any loss, damage or injury arising from the use of the information given.