


AGNI-Wrap in a Shaftwall (min 41mm) PEX Pipe 16-20mm Max FRR -/60/60

System ID# FC452

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- 2. Insert one revolution of AGNI-Wrap 50 (20mm inside & 30mm outside the wall) into the annular gap each side of the wall.
- 3. Apply 10mm deep AGNI-Black between AGNI-Wrap 50 and the pipe, finishing flush with the edge of the AGNI-Wrap 50.
- 4. Apply 30mm x 30mm AGNI-Black fillet/cone around the AGNI-Wrap.

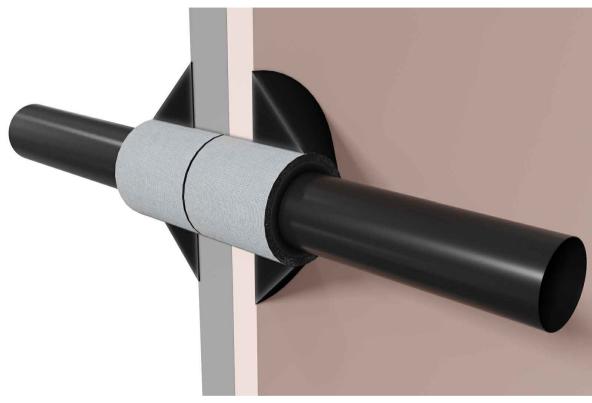

100	hnica	l los	tormai	tion.
- 100	пппа			

Substrate	Min. 25mm Shaftliner & 16mm fire-rated plasterboard wall (Shaftwall system)
Service range	From DN16mm up to DN20mm PEX pipes
Annular gap	4.6-8.3mm
AGNI-Products	AGNI-Wrap 50, AGNI-Black
Protection installation	From both sides of the wall

Compliance Information

Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/60/60
Reference	RIRF25006




8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Disclaimer

Date 21.04.2025

System ID# FC452

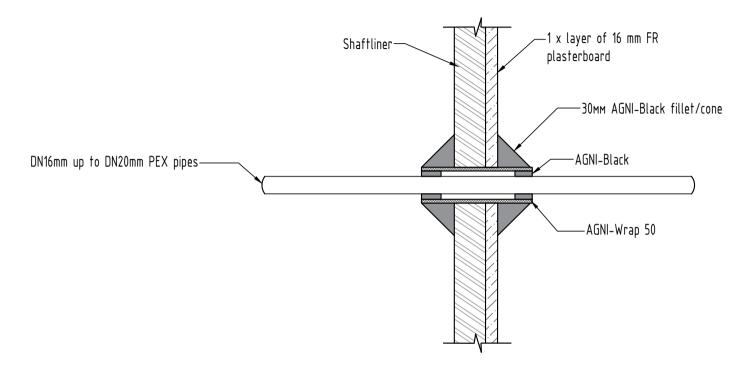

Technical Information	
Substrate	Min. 25mm Shaftliner & 16mm fire-rated plasterboard wall (Shaftwall system)
Service range	From DN16mm up to DN20mm PEX pipes
Annular gap	4.6-8.3mm
AGNI-Products	AGNI-Wrap 50, AGNI-Black
Protection installation	From both sides of the wall

Compliance information		
Standards	AS1530.4-2014, AS4072.1-2005	
FRR/FRL	-/60/60	
Reference	RIRF25006	



8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date 21.04.2025