




FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

Allproof Low Profile Fire Collar PVC (100mm) Floor Waste in 105mm CLT Floor

INSTALLATION INSTRUCTIONS:

1. Ensure substrate around pipe is flat and free from obstructions.
2. Open pipe collar and position around pipe.
3. Slide tab through slot in pipe collar and fold back 180° to secure.
4. Secure pipe collar using 12G x 50mm TEK screws. Do not use fixings which rely on plastic or nylon components for grip.
5. Install only from underside on floor penetrations.

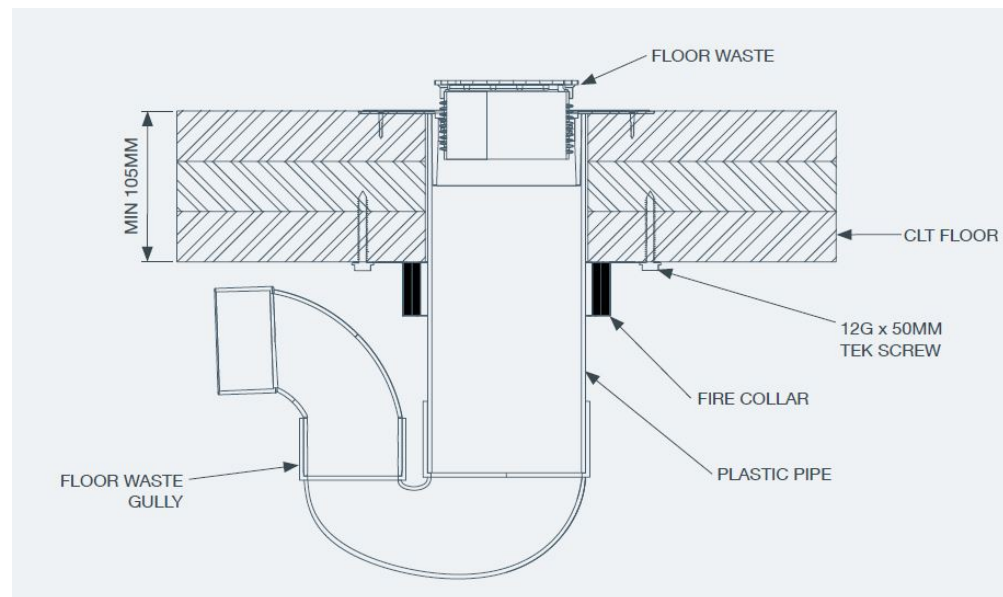

BRANZ Appraised
Appraisal No.1088 [2019]

As a part of our policy of on-going product development and testing, we reserve the right to modify, alter or change product specifications without giving notice. All information contained in this document is given in good faith and is provided for guidance only. Any drawings provided are for illustrative purposes only. As Firestop Centre has no control over the methods or competence of installation and of prevailing site conditions, no warranties, expressed or implied, is intended to be given as to the actual performance of the product mentioned or referred to herein and no liability whatsoever will be accepted for any loss, damage or injury arising from the use of the information given.

For all technical details on the products specified please refer to the technical data sheets that can be found on www.firestopcentre.co.nz

Signed and approved:



BRANZ Appraisal 1008
Technical Manual - Plumbing Pg 14
AS1530.4-2014 AS4072.1-2005

System ID# FC524

Products	Allproof Low-Profile Fire Collar
Application	Fire stopping of floor wastes in CLT floors
Construction	Minimum floor thickness of 105mm and comprise CLT laminated timber

Fire Classification:

PVC 100mm diam floor waste through a 120mm hole

FRR -/60/-

ALLPROOF

INDUSTRIES

Allproof Industries Ltd
17 Bay Park Place
Beach Haven, AK 0626

Sheet size: A4	Drawn date & no: 28/5/25
Scale: NTS	Drawn by: G.P