




FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

Allproof Fire Wrap PVC Plastic Floor Waste in 150mm Concrete Floor

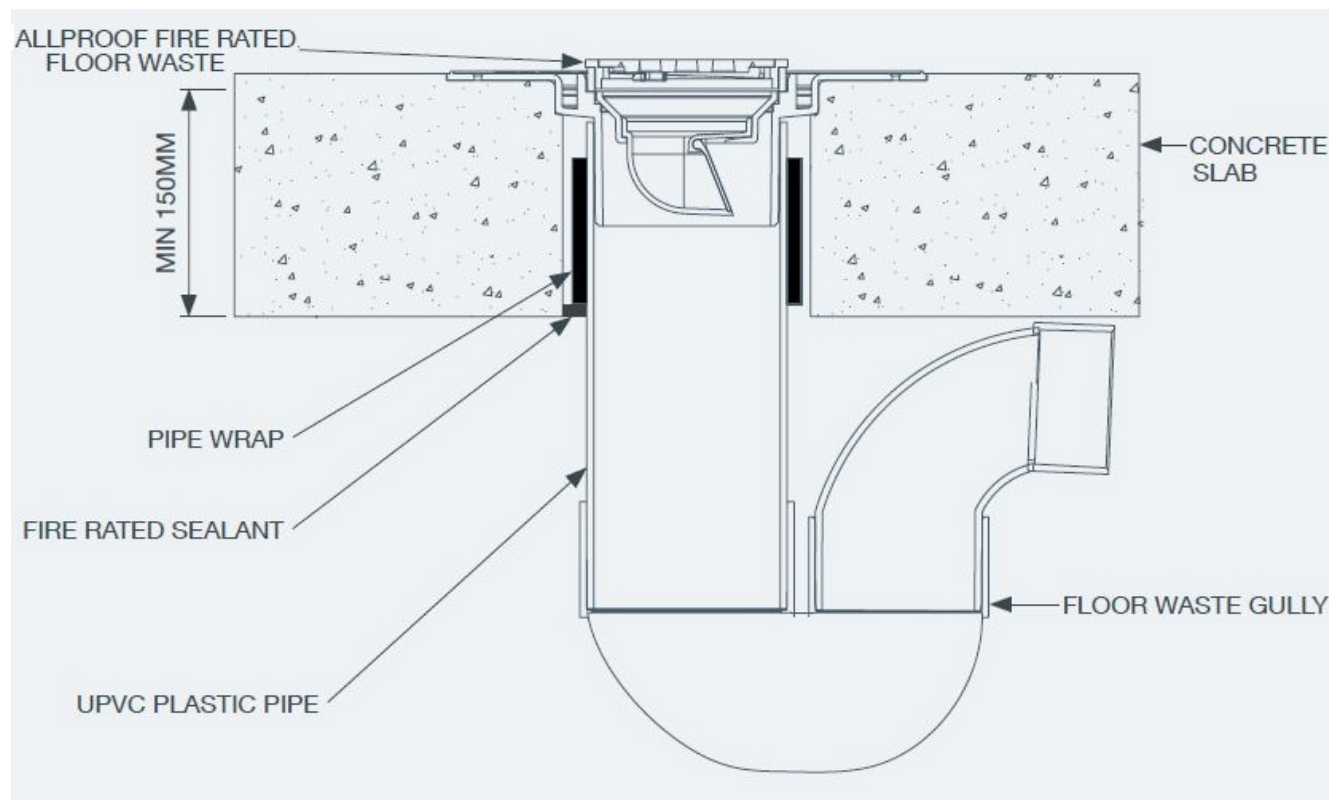

INSTALLATION INSTRUCTIONS:

1. Install Allproof Fire Wrap (FW80) into aperture recessed min 5mm.
2. Seal the wrap in place with Allproof MAS310 sealant finishing flush with bottom of floor slab.

As a part of our policy of on-going product development and testing, we reserve the right to modify, alter or change product specifications without giving notice. All information contained in this document is given in good faith and is provided for guidance only. Any drawings provided are for illustrative purposes only. As Firestop Centre has no control over the methods or competence of installation and of prevailing site conditions, no warranties, expressed or implied, is intended to be given as to the actual performance of the product mentioned or referred to herein and no liability whatsoever will be accepted for any loss, damage or injury arising from the use of the information given.

For all technical details on the products specified please refer to the technical data sheets that can be found on www.firestopcentre.co.nz

Signed and approved:



BRANZ Appraisal 1008
Technical Manual - Plumbing Pg 56
AS1530.4-2014 AS4072.1-2005

System ID# FC525

Products	Allproof Fire Wrap
Application	Fire stopping of floor wastes in rigid floors
Construction	Minimum floor thickness of 150mm and comprise aerated concrete or concrete

Fire Classification:

With Allproof Fire-Rated Floor Waste:

80mm diam waste with aperture size 102mm diam

FRR -/90/90

With Standard Floor Waste:

80mm diam waste with aperture size 102mm diam

FRR -/60/-

ALLPROOF

INDUSTRIES

Allproof Industries Ltd
17 Bay Park Place
Beach Haven, AK 0626

Sheet size: A4	Drawn date & no: 28/5/25
Scale: NTS	Drawn by: G.P