




**Firestop  
Centre**  
Innovative Firestop Solutions

## System FC347

**Penetration Detail:** Linear Vertical  
Gap up to 20mm fire-stopped with  
FIRESTOP Ultra Sealant

**Separating Element:** Min. 116mm thick  
FR Plasterboard (2 x 13mm) or Concrete  
Wall

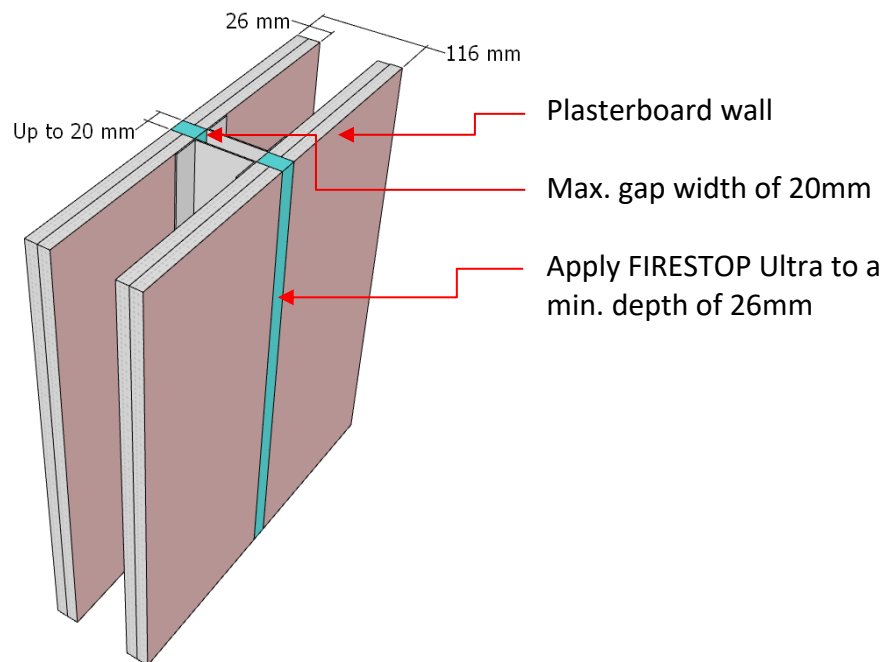

### Installation Instructions:

1. Ensure surfaces are free of grease or other contaminants.
2. Apply FIRESTOP Ultra to the full depth of the plasterboard (nominal 26mm) on both sides, finished flush with the plasterboard face.

### Services & Ratings (FRR)

Linear Gap Orientation	Gap Width	Sealant Depth	FRR
Vertical	20mm	26mm	-/120/120

- **FIRESTOP Ultra** is suitable for both interior and exterior applications - refer to the *FIRESTOP Ultra UV-Adhesion Report* for details.

### Compliance

**Report** Fire TS Lab Report  
RIR2207601  
**Pages** 4 & 16  
**Standards** AS1530.4-2014 &  
AS4072.1-2005

Firestop Centre Technical support:  
Tel: +64 9 483 4000  
[info@firestopcentre.co.nz](mailto:info@firestopcentre.co.nz)  
[www.firestopcentre.co.nz](http://www.firestopcentre.co.nz)

Drawing Rev: 1.0

Scale: NTS

**Disclaimer:** Firestop Centre may change product specifications without notice as part of our ongoing development and testing. All information in this document is provided in good faith and for guidance only. All drawings are for illustration purposes only and may not reflect the actual product. Since we cannot control how the product is installed or the conditions on-site, we do not guarantee the product's performance. We also accept no responsibility for any loss, damage, or injury resulting from the use of this information.