

FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

AGNI-Seal in a Shaftwall (min 41mm) Alarm Cables (Bundle of 8) FRR -/60/60

System ID# FC455

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- 2. Apply sealant to the full depth of the annular space, 41mm (nominal) deep and finished flush with the wall.
- 3. Apply 10mm x 10mm AGNI-Seal fillet/cone around the service.
- 4. Apply one revolution of 50mm wide AGNI-Shield with a 50mm overlap wrapped around the cables.
- 5. Secure AGNI-Shield to the cables using one AGNI-Strap placed in the middle of the AGNI-Shield.



	Information

Substrate	Min. 25mm Shaftliner & 16mm fire-rated plasterboard wall (Shaftwall system)
Service range	8 x Alarm cables
Annular gap	3.2mm-8.5mm
AGNI-Products	AGNI-Seal, AGNI-Shield, AGNI-Strap
Protection installation	From both sides of the wall

Compliance Information

Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/60/60
Reference	RIRF25006



8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date


21.04.2025



FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

System ID# FC455

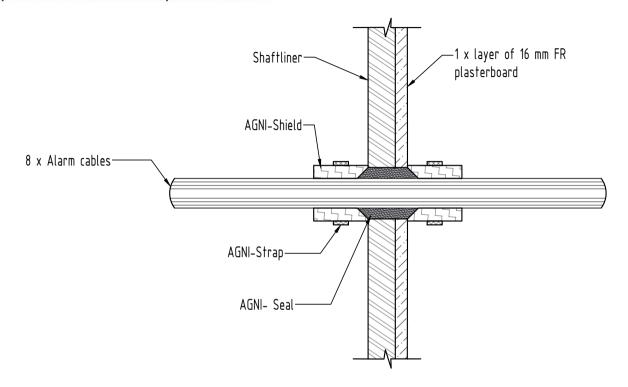

Technical Information	
Substrate	Min. 25mm Shaftliner & 16mm fire-rated plasterboard wall (Shaftwall system)
Service range	8 x Alarm cables
Annular gap	3.2mm-8.5mm
AGNI-Products	AGNI-Seal, AGNI-Shield, AGNI-Strap
Protection installation	From both sides of the wall

Compliance Information

Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/60/60
Reference	RIRF25006

_ ®
Agnitek
FIRE RATED TECHNOLOGY

8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date 21.04.2025

Disclaimer